



## BathDrain

Waste and Overflow Drain

- High quality material
- Easy to install and service
- Adjustable to fit all standard tubs
- Chrome plated face plate and pop-up
- Turn overflow plate to close or pop-up to drain




**BALBOA**  
water group

# Bath Drain Waste and Overflow

## Installation Instructions

1. Install cable on the Waste Elbow/Actuator and Overflow Elbow.
2. Dry fit the plumbing before final assembly to make sure that the pipe lengths are correct.
3. Assemble kit as shown. (using glue appropriate to local codes). Tighten nuts.
4. Install overflow elbow w/gasket, secure to tub with retaining plate and nut. Install cover plate and secure with set screw.
5. Install waste elbow w/gasket. Secure to tub with strainer plate and nut.
6. Adjust stopper height to ensure proper activation. Secure height adjuster with lock nut install.

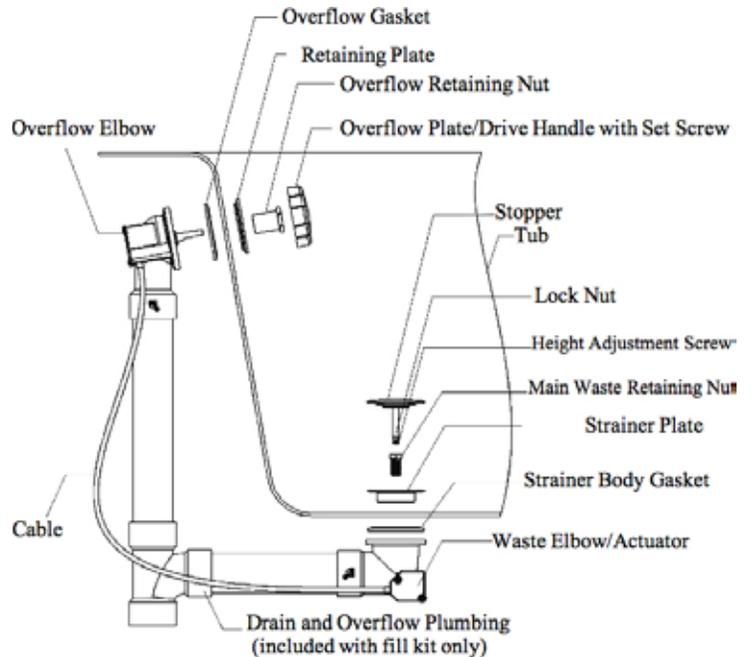

## Materials Needed



**Material No:** 39027-PC  
**Description:** Cable operated with 27" cable



**Material No:** 39005-PC  
**Description:** Toe touch

